

 GREE



The main control panel features a digital display showing temperature settings. The display is divided into sections: 'MAX' and 'MIN' on the left, a large digital readout in the center, and 'NO. SET CHECK' on the right. Below the display are several rows of icons and buttons. The top row contains icons for power, swing, auto, fan, snowflake, water droplet, fan, sun, and heater. The second row contains icons for fan speed and a turbo mode indicator. The third row contains icons for moon, house, AT, sun, tree, house, padlock, padlock, dollar sign, and a no symbol. The bottom row contains buttons labeled: SAVE, CLEAN, E-HEATER, X-FAN, FRESH AIR, DEFROST, SHIELD, GROUP, MEMORY, and MASTER.

MAX 8.88 °C
MIN 8.88 °F
NO. SET CHECK 88.88
ON/OFF DAY HOUR

SAVE CLEAN E-HEATER X-FAN FRESH AIR DEFROST SHIELD GROUP MEMORY MASTER



ENTER/CANCEL

SLEEP

FAN

MODE



FUNCTION

TIMER

SWING

ON/OFF